


- Notice:**
1. The communication line is connected by a shielded twisted pair.
 2. The wireless controller models do not need a wire controller.

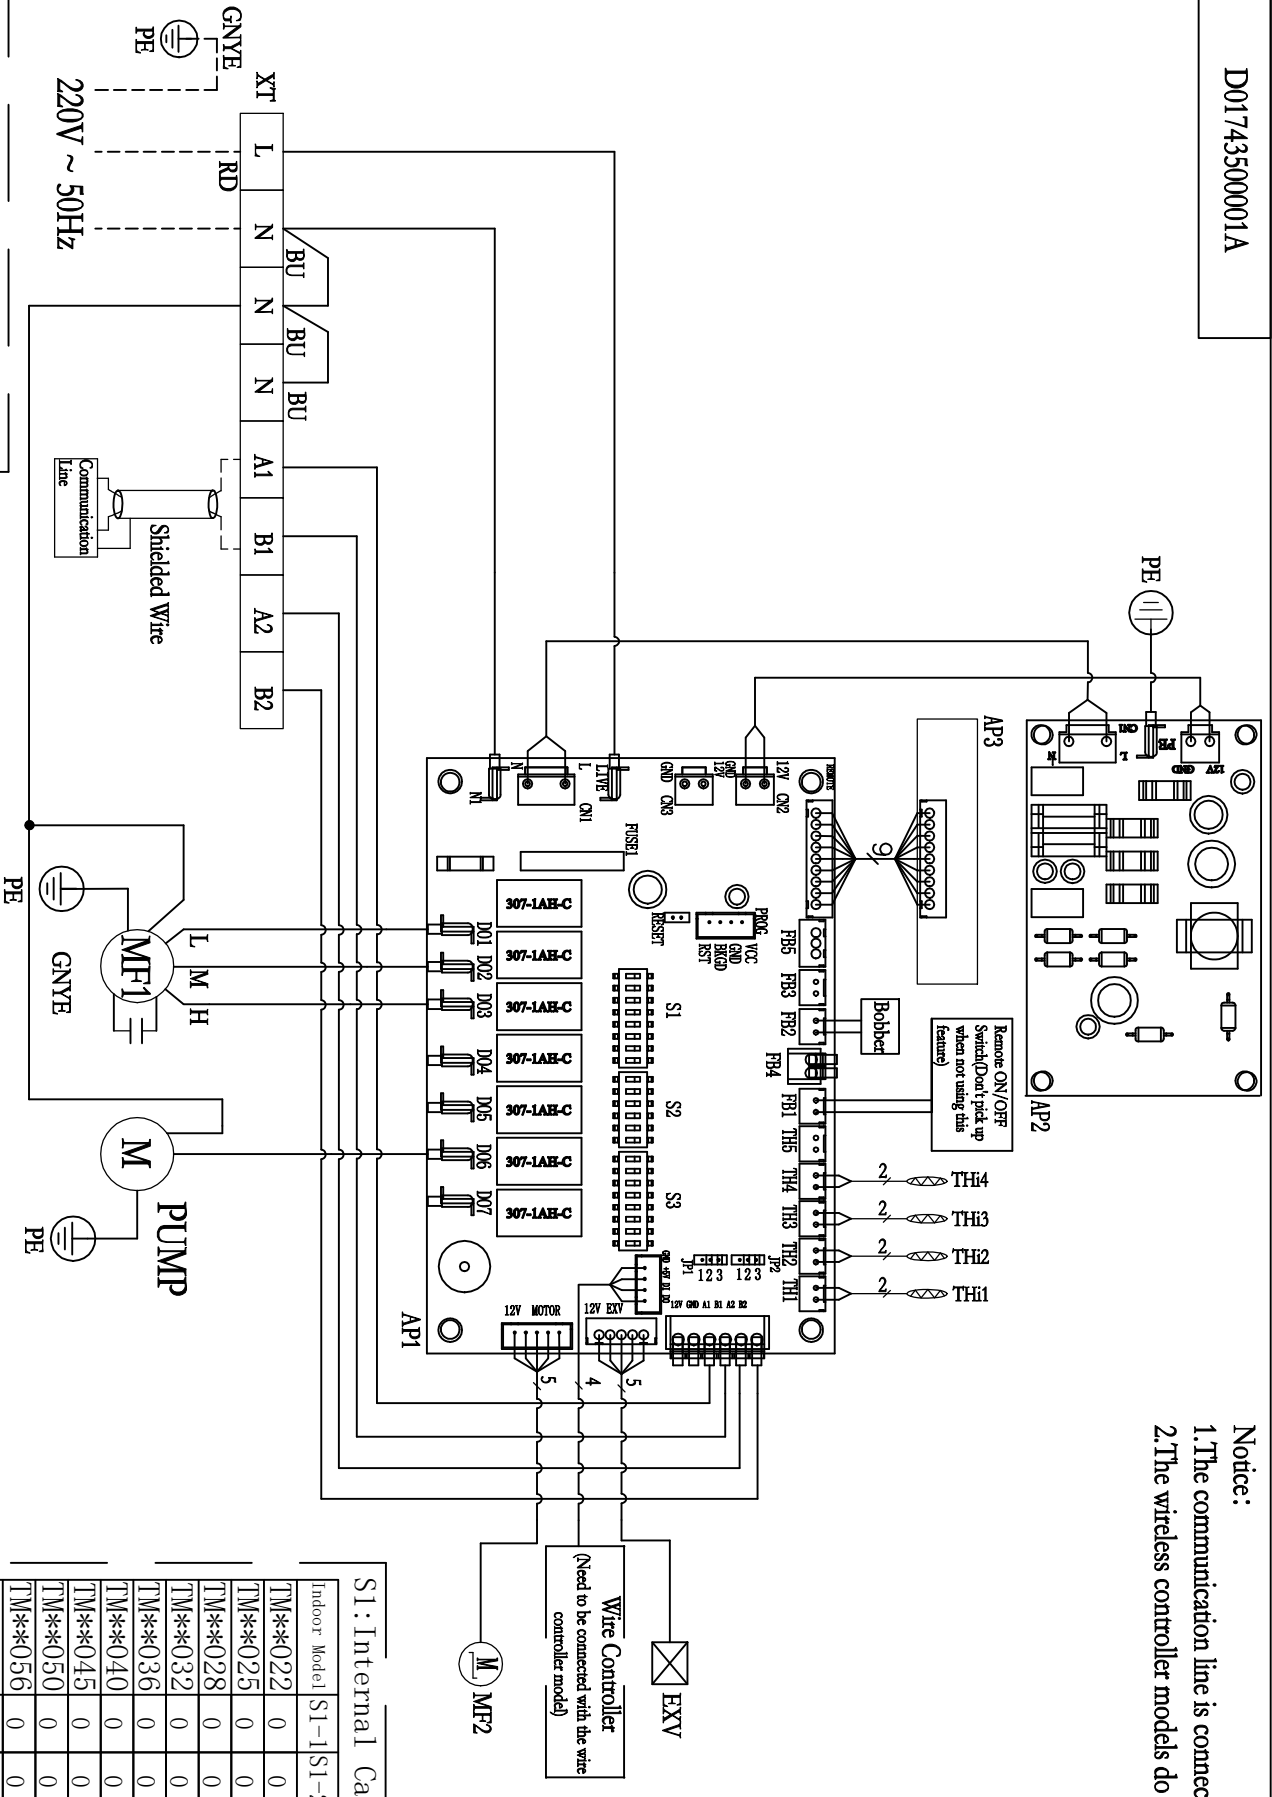

Symbol Description:

AP1	Main Control Board	PUMP	Drain Pump
AP2	Switching Power Supply Board	EXV	Electronic Expansion Valve
AP3	Remote Control Panel	TH1	Coil Inlet Temperature
XT	Power Terminal Block	TH2	Central Coil Temperature
MF1	Fan Motor	TH3	Coil Outlet Temperature
MF2	Wind Pendum Motor	TH4	Ambient Temperature

S3: Model、Function Code

Num	Function	0	1
S3-1		/	/
S3-2	No	/	/
S3-3	Electric Heating2	No Electric Heating2	Electric Heating2
S3-4	Electric Heating1	No Electric Heating1	Electric Heating1

Wire Controller
(Need to be connected with the wire controller model)

Indoor Model	S3-5	S3-6	S3-7	S3-8
TMDN	0	0	0	0
TMDS	0	0	0	1
TMDH	0	0	1	0
TMCF	0	0	1	1
TMVX	0	1	0	0
TMWV	0	1	0	1
TMDF	0	1	1	0
TMCS	0	1	1	1
TMCD	1	0	0	0

S1: Internal Capability Code

Indoor Model	S1-1	S1-2	S1-3	S1-4	S1-5	S1-6	S1-7	S1-8
TM**022	0	0	1	0	1	1	1	0
TM**025	0	0	1	1	0	0	0	1
TM**028	0	0	1	1	1	0	0	0
TM**032	0	0	1	0	0	0	0	0
TM**036	0	0	1	0	0	1	0	0
TM**040	0	0	1	0	1	0	0	0
TM**045	0	0	1	0	1	1	0	1
TM**050	0	0	1	1	0	0	1	0
TM**056	0	0	1	1	1	0	0	0
TM**063	0	0	1	1	1	1	1	1
TM**071	0	0	1	0	0	1	1	1
TM**080	0	0	1	0	0	0	0	0
TM**090	0	0	1	0	1	0	1	0
TM**100	0	0	1	0	0	1	0	0
TM**112	0	0	1	1	0	0	0	0
TM**125	0	0	1	1	1	1	0	1
TM**140	0	0	0	0	1	1	0	0