

S31:Function Code (Default 0)

Serial Number	Function	0	1
S31-1	Function Selection	Remote Switch	Hotel Card
S31-2	Return Air Temperature	Main Controller Return air	Line Controller Return Air
S31-3	Electric Heating	Equiped	Not Equiped
S31-4	Fan		1

S1:The Indoor Unit Capability Code


Capability	S1-1	S1-2	S1-3	S1-4	S1-5	S1-6	S1-7	S1-8
***028	0	0	0	1	1	1	0	0
***036	0	0	1	0	0	1	0	0
***045	0	0	1	0	1	1	0	1
***050	0	0	1	1	0	0	1	0
***056	0	0	1	1	1	0	0	0
***063	0	0	1	1	1	1	1	1
***071	0	1	0	0	0	1	1	1
***080	0	1	0	1	0	0	0	0
***090	0	1	0	1	1	0	1	0
***100	0	1	1	0	0	1	0	0
***112	0	1	1	1	0	0	0	0
***125	0	1	1	1	1	1	0	1
***140	1	0	0	0	1	1	0	0
***160	1	0	1	0	0	0	0	0

S32:Model Code

S32-1	S32-2	S32-3	S32-4
1	0	1	1


Notice:

- Dip Description: ON=1, OFF=0.
- S1-1~S1-8 Set According To Model Capability (Factory Setting).

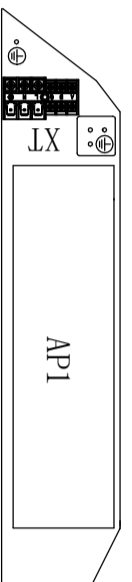

Electrical Layout

D0A12U500001B

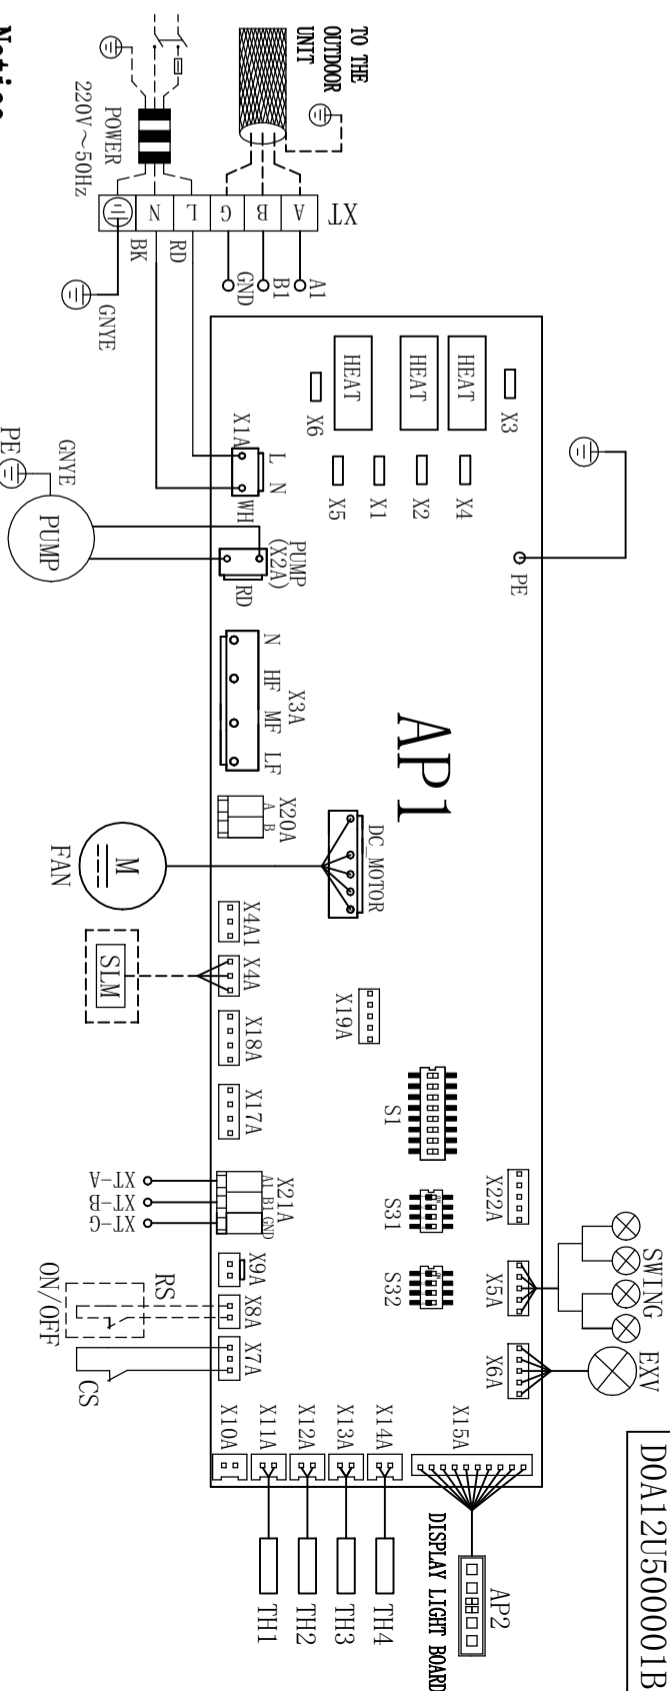

Notice:

- Field Wiring, ----- The Dashed Box Is An Optional Configuration.
- Only Copper Wires Are Allowed For Wiring.
- Please Use A 3-Core Shielded Wire For The Communication Line, And The Shielding Layer Is Connected To The Sheet Metal ⊕.

AP1	Main Control Board	XT	Terminal Block	TH1	Liquid Pipe Temp.
AP2	Display Light Board	RS	ON/OFF Switch	TH2	Middle Pipe Temp.
SWING	Wind Pendulum Motor	SLM	Line Controller	TH3	Gas Pipe Temp.
EXV	Electronic Expansion Valve	PUMP	Water Pump	TH4	Room Temp.
CS	Water-Level Switch	FAN	Fan Moter		