


Wired Controller

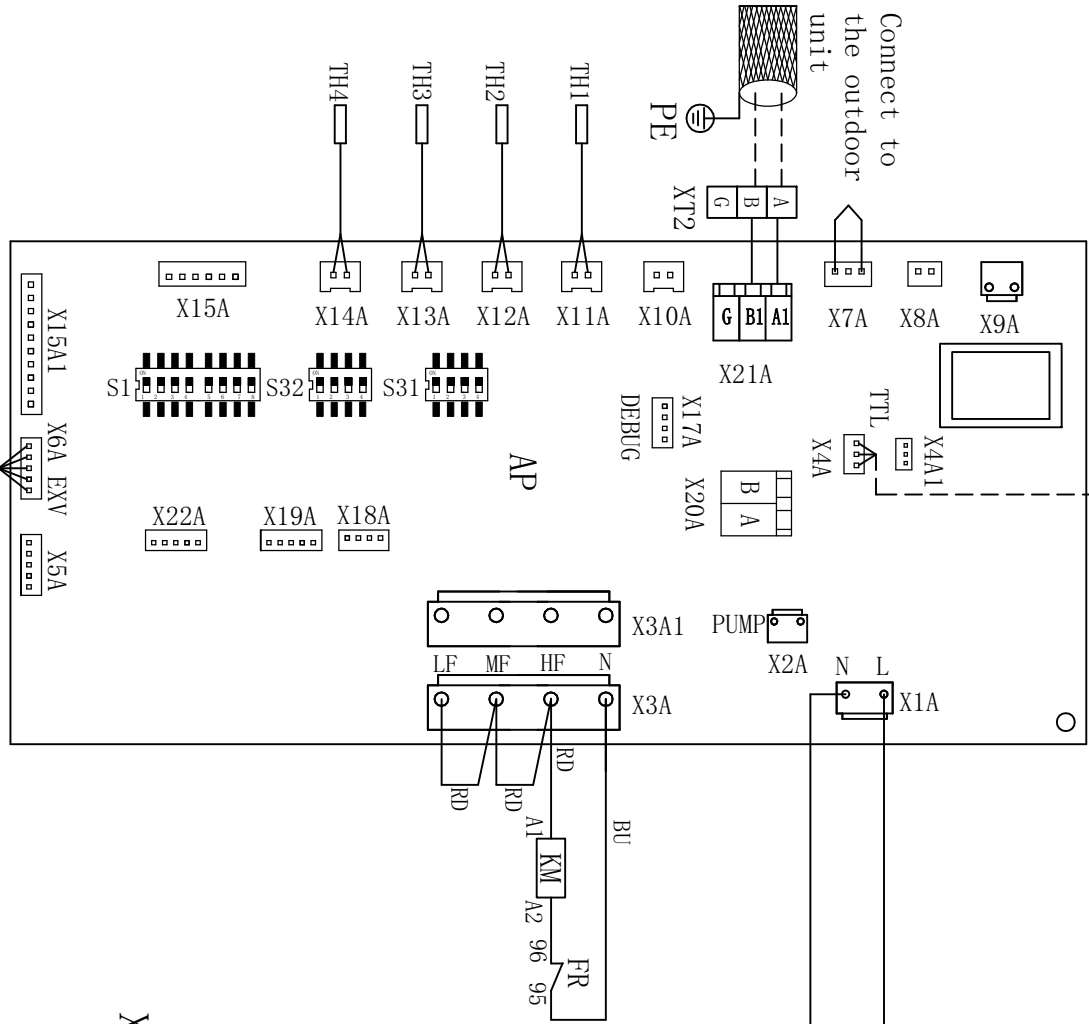



Symbol	Description
AP	Main Controller
EXV	Electronic Expansion Valve
TH1	Coil Inlet Temp.
TH2	Central Coil Temp.
TH3	Coil Outlet Temp.
TH4	Ambient Temp.
XT	Terminal Block
KM	AC Contactor
FR	Thermal Relay
L	Magnetic Ring

Dial Setting:

S31: Function Dialing		S32: Model Dialing	
Function Dialing		Model Dialing	
S31-1	S31-2	S32-1	S32-2
0	0	1	1
0	0	0	0
0	0	0	0

S1: Capability DIP [1=ON 0=OFF]

Model	S1-1	S1-2	S1-3	S1-4	S1-5	S1-6	S1-7	S1-8
200	0	1	0	1	0	0	0	0
250	0	1	1	0	0	1	0	0

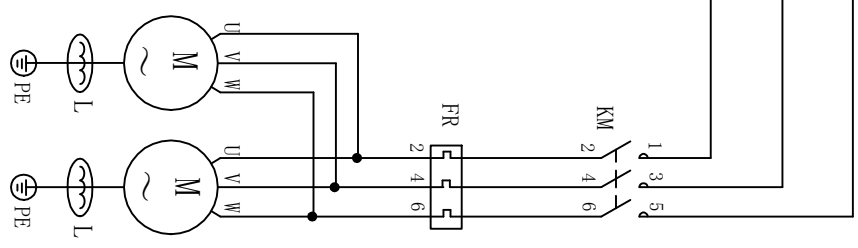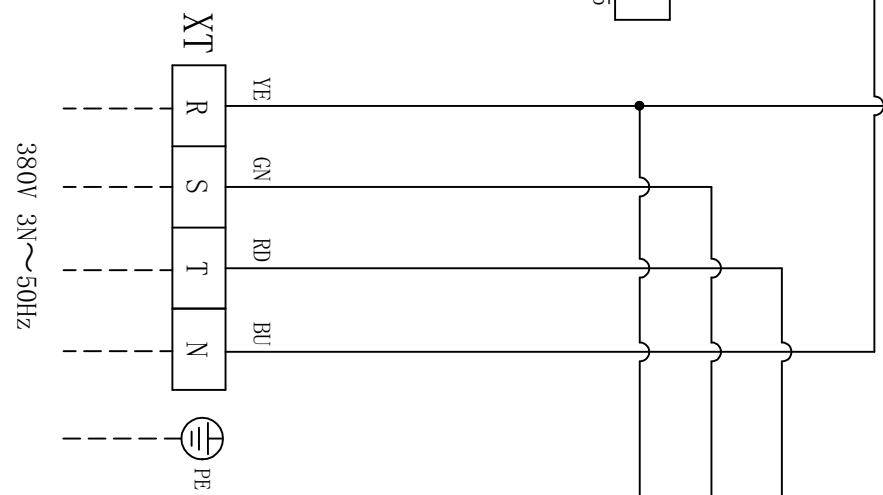

NOTICE:  
 1、Please use shielded twisted pair for communication line;  
 2、----- The dotted line is the engineering wiring.