D0A10C500001C

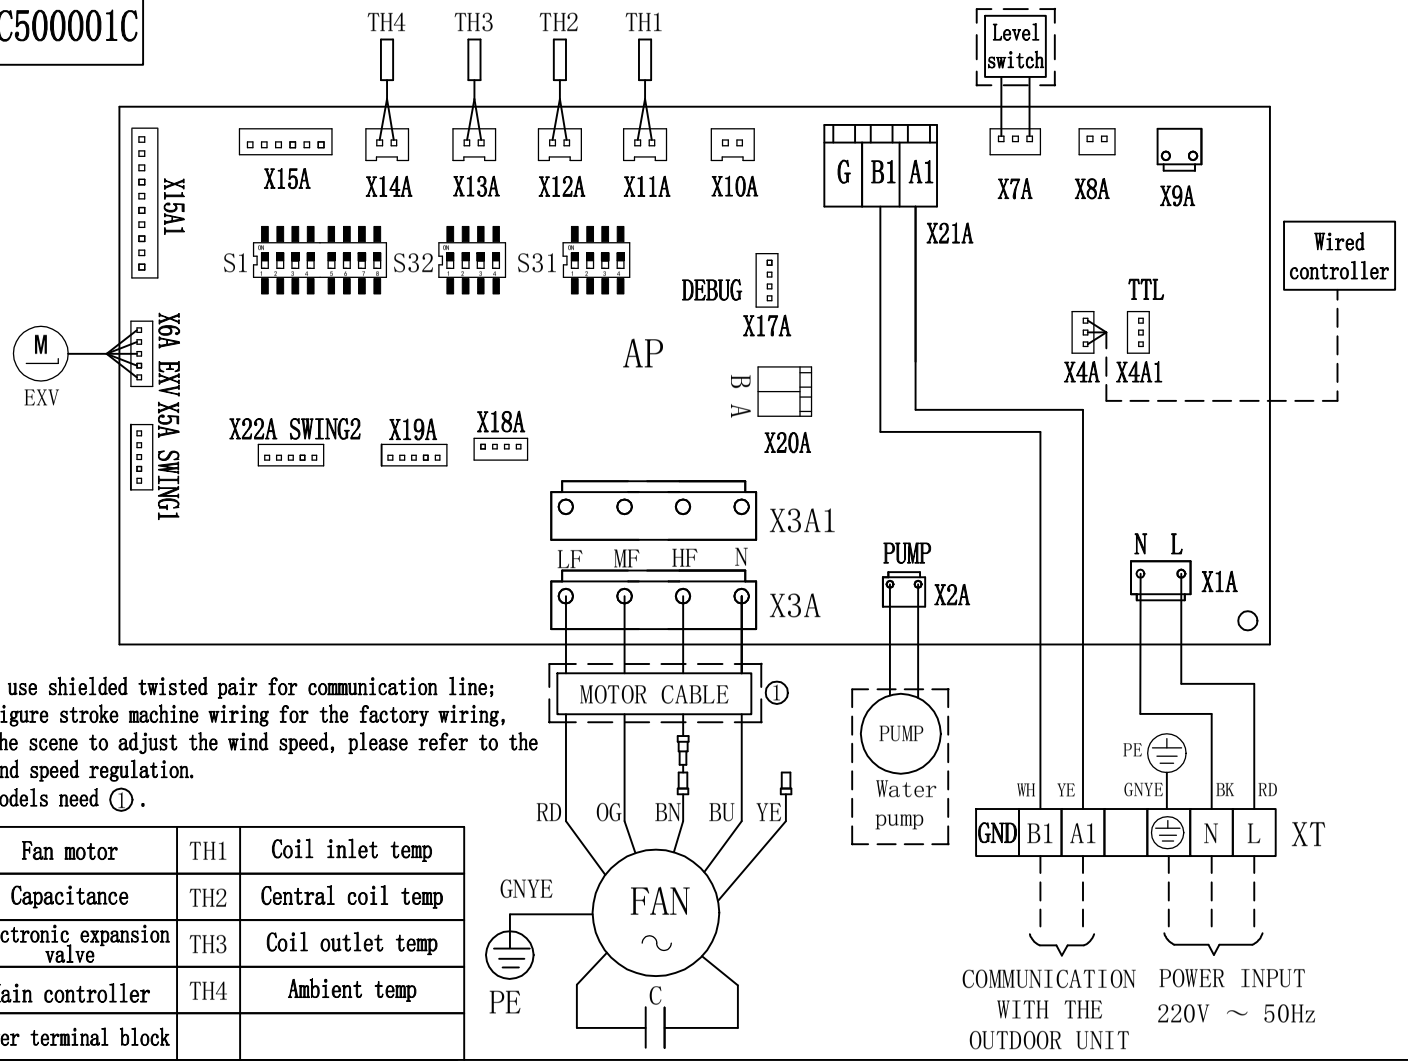


NOTICE:

1、Please use shielded twisted pair for communication line;

2、This figure stroke machine wiring for the factory wiring, such as the scene to adjust the wind speed, please refer to the actual wind speed regulation.

3、Some models need ①.

| | | | |
|---|---|---|---|
| FAN | Fan motor | TH1 | Coil inlet temp |
| C | Capacitance | TH2 | Central coil temp |
| EXV | Electronic expansion valve | TH3 | Coil outlet temp |
| AP | Main controller | TH4 | Ambient temp |
| XT | Power terminal block | | |

S31:Function DIP (default 0)

| CODE | Function | 0 | 1 |
|---|---|---|---|
| S31-1 | Function select | Remote switch | The hotel card |
| S31-2 | Return air temp. | Main controller | Wired controller |
| S31-3 | Heater | Without | With |
| S31-4 | Fan motor | AC | DC |

Wind speed to static pressure

| Pressure \ Speed | H | M | L |
|---|---|---|---|
| 30pa | YE | OG | RD |
| 10pa | BN | OG | RD |

S32: The type of indoor unit

| S32-1 | S32-2 | S32-3 | S32-4 |
|---|---|---|---|
| 0 | 0 | 0 | 0 |

S1: Indoor unit capability DIP

| Model | S1-1 | S1-2 | S1-3 | S1-4 | S1-5 | S1-6 | S1-7 | S1-8 |
|---|---|---|---|---|---|---|---|---|
| ***22 | 0 | 0 | 0 | 1 | 0 | 1 | 1 | 0 |
| ***25 | 0 | 0 | 0 | 1 | 1 | 0 | 0 | 1 |
| ***28 | 0 | 0 | 0 | 1 | 1 | 1 | 0 | 0 |
| ***32 | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 0 |
| ***36 | 0 | 0 | 1 | 0 | 0 | 1 | 0 | 0 |
| ***40 | 0 | 0 | 1 | 0 | 1 | 0 | 0 | 0 |
| ***45 | 0 | 0 | 1 | 0 | 1 | 1 | 0 | 1 |
| ***50 | 0 | 0 | 1 | 1 | 0 | 0 | 1 | 0 |
| ***56 | 0 | 0 | 1 | 1 | 1 | 0 | 0 | 0 |
| ***63 | 0 | 0 | 1 | 1 | 1 | 1 | 1 | 1 |
| ***71 | 0 | 1 | 0 | 0 | 0 | 1 | 1 | 1 |
| ***80 | 0 | 1 | 0 | 1 | 0 | 0 | 0 | 0 |
| ***90 | 0 | 1 | 0 | 1 | 1 | 0 | 1 | 0 |
| ***100 | 0 | 1 | 1 | 0 | 0 | 1 | 0 | 0 |
| ***112 | 0 | 1 | 1 | 1 | 0 | 0 | 0 | 0 |
| ***125 | 0 | 1 | 1 | 1 | 1 | 1 | 0 | 1 |
| ***140 | 1 | 0 | 0 | 0 | 1 | 1 | 0 | 0 |
| ***160 | 1 | 0 | 1 | 0 | 0 | 0 | 0 | 0 |