


DOA116500001C

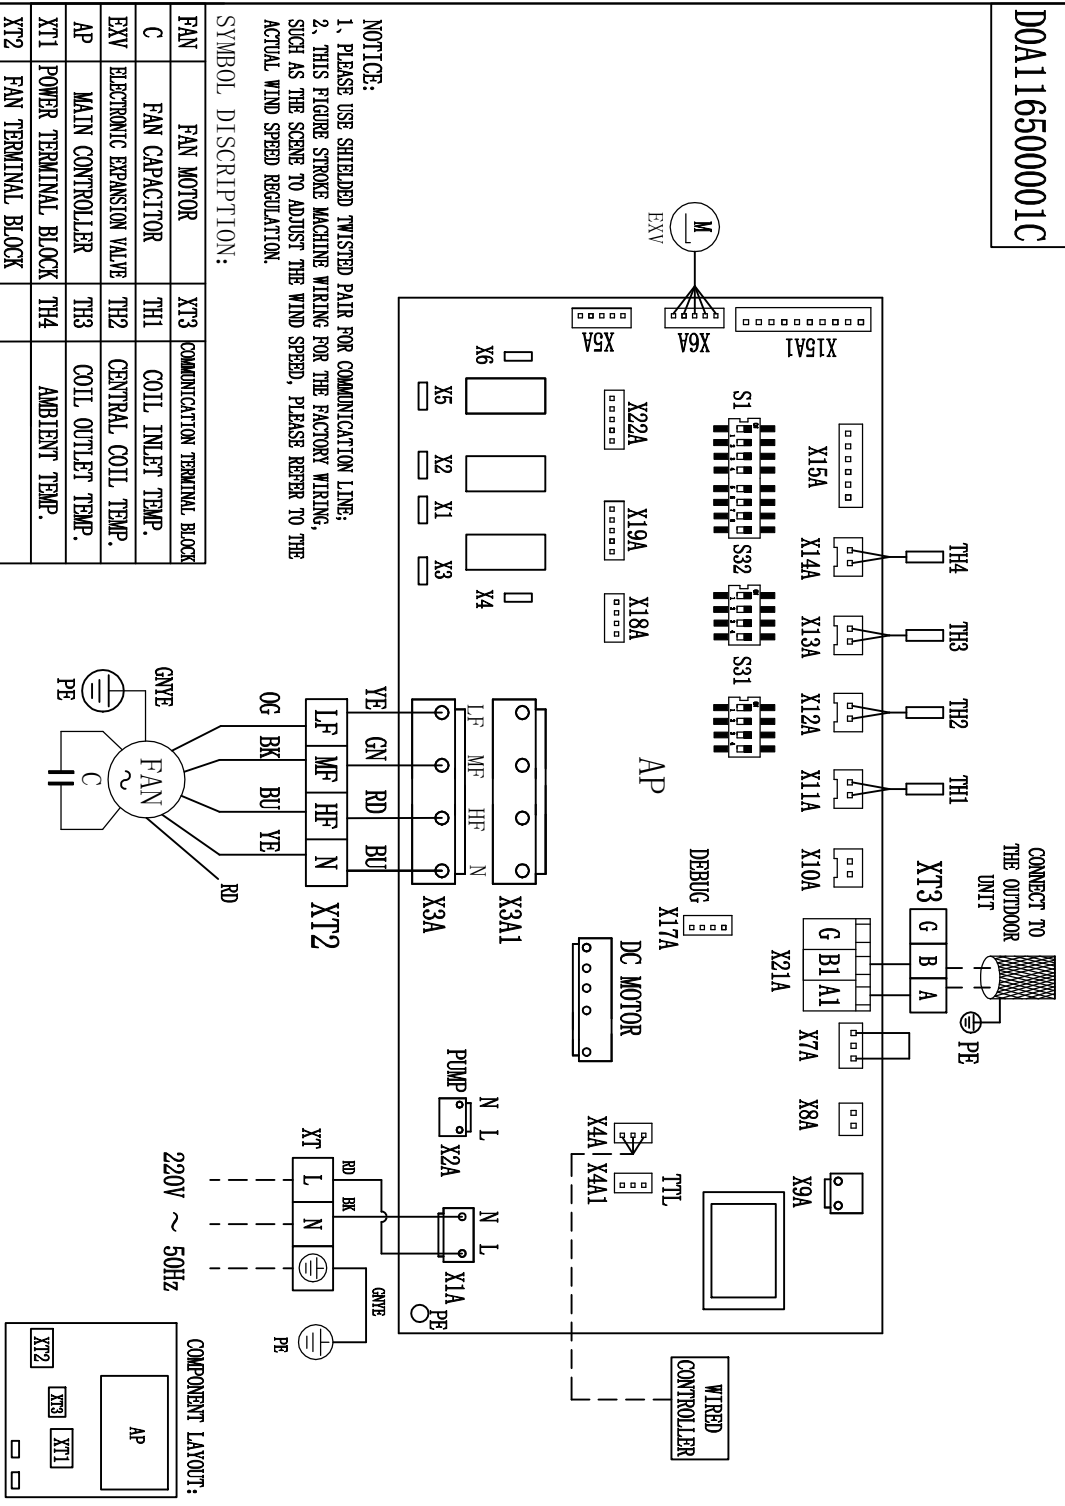

NOTICE:
 1. PLEASE USE SHIELDED TWISTED PAIR FOR COMMUNICATION LINE.
 2. THIS FIGURE STROKE MACHINE WIRING FOR THE FACTORY WIRING, SUCH AS THE SCENE TO ADJUST THE WIND SPEED, PLEASE REFER TO THE ACTUAL WIND SPEED REGULATION.

SYMBOL DESCRIPTION:

FAN	FAN MOTOR	XT3	COMMUNICATION TERMINAL BLOCK
C	FAN CAPACITOR	TH1	COIL INLET TEMP.
EXV	ELECTRONIC EXPANSION VALVE	TH2	CENTRAL COIL TEMP.
AP	MAIN CONTROLLER	TH3	COIL OUTLET TEMP.
XT1	POWER TERMINAL BLOCK	TH4	AMBIENT TEMP.
XT2	FAN TERMINAL BLOCK		

S31: FUNCTION DIP (DEFAULT 0)

DIP	Function	0	1
S31-1	Select The remote switch	0	1
S31-2	Return air temp. Main controller	With	Wired controller
S31-3	Heater	With	Without
S31-4	Fan motor	AC	DC

WIND SPEED TO STATIC PRESSURE

Wind speed / Static pressure	High			Mid			Low		
	RD	BK	OG	RD	BK	OG	RD	BK	OG
50pa									
100pa									

S32: INDOOR UNIT

S32-1	S32-2	S32-3	S32-4
0	0	1	0

S1: INDOOR UNIT CAPABILITY DIP

Model	S1-1	S1-2	S1-3	S1-4	S1-5	S1-6	S1-7	S1-8
***22	0	0	0	1	0	1	1	0
***25	0	0	0	1	1	0	0	1
***28	0	0	0	1	1	1	0	0
***32	0	0	1	0	0	0	0	0
***36	0	0	1	0	0	1	0	0
***40	0	0	1	0	1	0	0	0
***45	0	0	1	0	1	1	0	1
***50	0	0	1	1	0	0	1	0
***56	0	0	1	1	1	0	0	0
***63	0	0	1	1	1	1	1	1
***71	0	1	0	0	0	1	1	1
***80	0	1	0	1	0	0	0	0
***90	0	1	0	1	1	0	1	0
***100	0	1	1	0	0	1	0	0
***112	0	1	1	1	0	0	0	0
***125	0	1	1	1	1	1	0	1
***140	1	0	0	0	1	1	0	0