

D001LH500002C

INTERNAL MACHINE CAPABILITY CODE

INDOOR MODEL	S1-1	S1-2	S1-3	S1-4	S1-5	S1-6	S1-7	S1-8
***22	0	0	0	1	0	1	1	0
***25	0	0	0	1	1	1	0	1
***28	0	0	0	1	1	1	0	0
***32	0	0	1	0	0	0	0	0
***36	0	0	1	0	0	1	0	0
***40	0	0	1	0	1	0	0	0
***45	0	0	1	0	1	1	0	1
***50	0	0	1	1	0	0	1	0
***56	0	0	1	1	1	0	0	0
***63	0	0	1	1	1	1	1	1
***71	0	1	0	0	0	1	1	1
***80	0	1	0	1	0	0	0	0
***90	0	1	0	1	1	0	1	0
***100	0	1	1	0	0	1	0	0
***112	0	1	1	1	0	0	0	0
***125	0	1	1	1	1	1	0	1
***140	1	0	0	0	1	1	0	0
***160	1	0	1	0	0	0	0	0



FACTORY SETTING OF FUNCTION CODE (DEFAULT 0 IS NOT SPECIFIED):

Code	Setting	Setting
S31-4	0	1
S31-3		1
S31-2		1
S31-1		1

MODEL CODE FACTORY SETTING:

Model Code	S32-1	S32-2	S32-3	S32-4
S32-1	0	0	0	0

COMPONENT LOCATION:

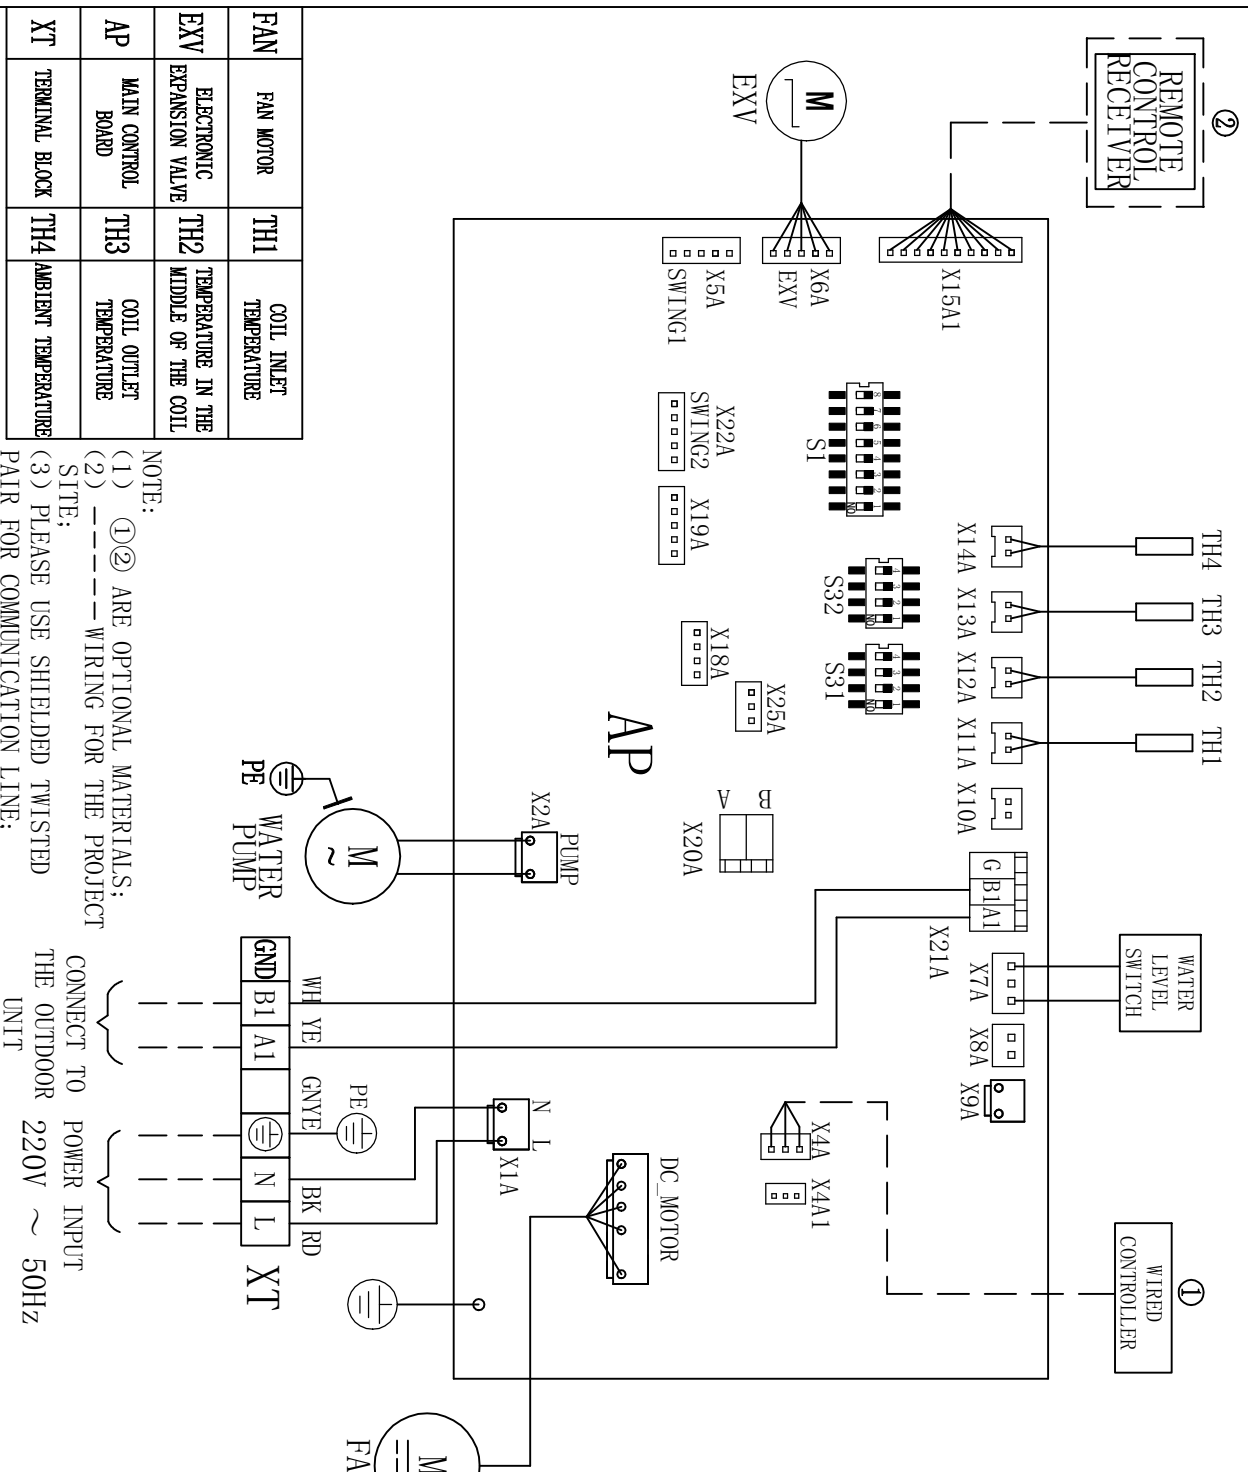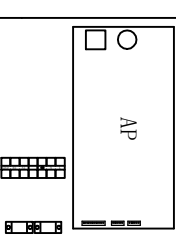

NOTE:
 (1) ①② ARE OPTIONAL MATERIALS;
 (2) --- WIRING FOR THE PROJECT SITE;
 (3) PLEASE USE SHIELDED TWISTED PAIR FOR COMMUNICATION LINE;

Terminal	Component	Terminal	Component
FAN	FAN MOTOR	TH1	COIL INLET TEMPERATURE
EXV	ELECTRONIC EXPANSION VALVE	TH2	TEMPERATURE IN THE MIDDLE OF THE COIL
AP	MAIN CONTROL BOARD	TH3	COIL OUTLET TEMPERATURE
XT	TERMINAL BLOCK	TH4	AMBIENT TEMPERATURE